

ENSURE THE KICKER SYSTEM VOLUME IS AT MAX VOLUME.



2. ENSURE YOUR DEVICE PLAYBACK VOLUME IS AT MAX VOLUME.

